 


ARROTOLATORI MECCANICI

ACCESSORIES

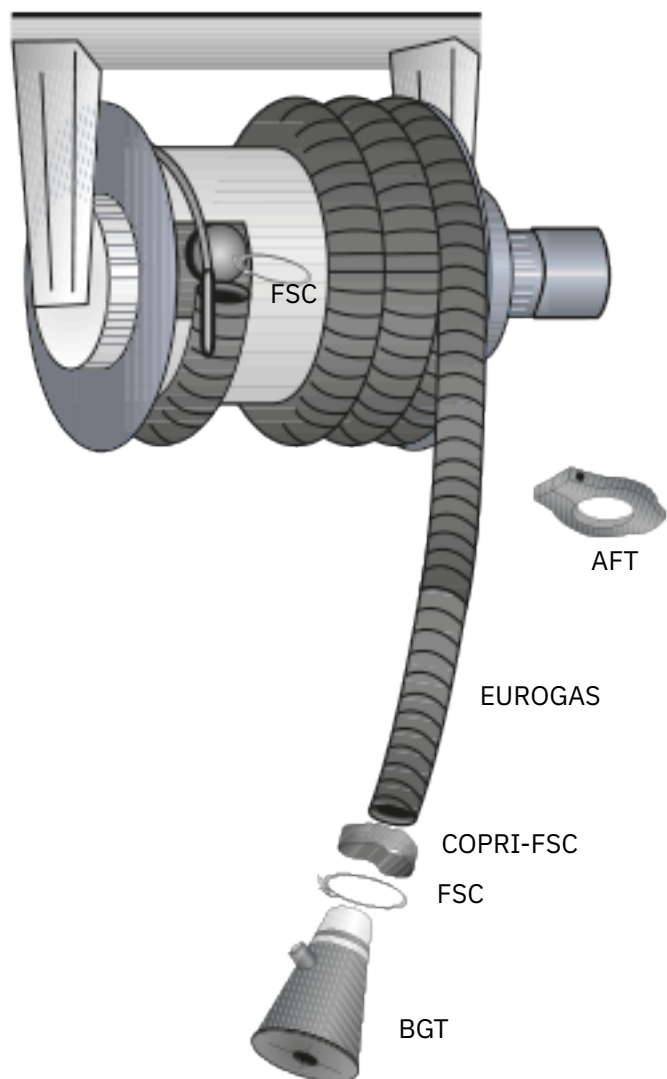

APPLICATION RESUME										
						MICRO START	MICRO CTRL			
AR	✓	✓				✓		✓	✓	
ARA	✓	✓					✓			✓
ARC		✓	✓			✓		✓	✓	
ARCA		✓	✓				✓			✓
AC			✓	✓		✓		✓	✓	
ACA			✓	✓			✓			✓
AC-MAXI				✓	✓	✓		✓	✓	
ACA-MAXI				✓	✓		✓			✓


ARROTOLATORI MECCANICI

ACCESSORIES

AFT



AFT-75	Ø 75 mm	Ø 3 "
AFT-100	Ø 100 mm	Ø 4 "
AFT-125	Ø 125 mm	Ø 5 "
AFT-150	Ø 150 mm	Ø 6 "

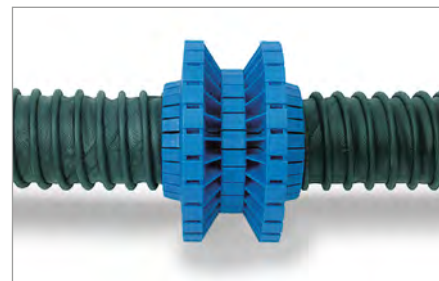 

AFT-200	Ø 200 mm	Ø 8 "
---------	----------	-------

Per tubazioni, fsc, copri fsc, bocchette vedi pg. 95 - For pipes, fsc, fsc covers, vents see pg. 95 - Pour les tuyaux, FSC, couvertures FSC, événements voir p. 95 - Bei Röhren, FSC, FSC Abdeckungen, Lüfter siehe Seite. 95 - Paratuberías, fsc, cubiertas fsc, respiraderos ver pg. 95.


OPTIONAL

SERR



AR75-SERR
AR100-SERR
AC-SERR (AC-AM-MAXI)

 Serranda automatica per arrotolatori - Automatic closing valve for reels - Clapet automatique pour enrouleur - Automatische absperreklappe für aufrollen - Tapa de cierre automática de la aspiración para los enrolladores.

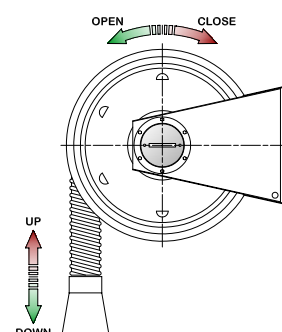

MICRO-CTRL



Microinterruttore con quadro elettrico per partenza e arresto automatico del ventilatore accoppiato - Microswitch electrical panel for starting and stopping automatic fan coupled - Panneau électrique Microswitch pour démarrer et arrêter automatique du ventilateur couplé - Mikroschalttafel zum Starten und Stoppen automatische Lüfter gekoppelt - Cuadro eléctrico Microinterruptor para arrancar y parar el ventilador automático acoplado.

MICRO-START



Microinterruttore per partenza e arresto automatico del ventilatore centralizzato (prevedere QE-AC) - Microswitch for starting and stopping automatic fan centralized (predict QE-AC) - Microswitch pour démarrer et arrêter ventilateur automatique centralisé (prévoir QE-AC) - Mikroschalter zum Ein- und Ausschalten automatische Lüfter zentralisiert (vorher QE-AC) - Microswitch para arrancar y parar el ventilador automático centralizado (predecir QE-AC).

QE-AC vedi pg. 112
QE-AC see pg. 112
QE-AC voir p. 112
QE-AC siehe seite. 112
QE-AC ver pg. 112

MICRO-TX



Microswitch di partenza automatica dell'aspiratore con comando via radio (senza fili). Da accoppiare al quadro elettrico QE-AC/RX - Microswitch for wireless automatic start and stop of the fan via radio frequency, to be combined with main switchboard QE-AC/RX - Système de démarrage automatique du ventilateur en radiofréquence (sans cables). A proposer avec le coffret QE-AC/RX - Automatisch Einschaltungssystem per Fernfunk (Kabellos). Zu verbinden mit Steuerung modell QE-AC/RX - Sistema de arranque automatico del aspirador por radio-frecuencia (sin cables). A conectar con el cuadro QE-AC/RX.

QE-AC/RX vedi pg. 65
QE-AC/RX see pg. 65
QE-AC/RX voir p. 65
QE-AC/RX siehe seite. 65
QE-AC/RX ver pg. 65